

## T482 OPERATING INSTRUCTION MANUAL


PANEL DESCRIPTION




CODE	DESCRIPTION
RUN •	TIMER START INDICATOR
OUT •	OUTPUT INDICATOR
LOCK O	TIMER LOCK INDICATOR
RESET	RESTORE TIMER SETTING

CONTROL Y REGULACIÓN TÉRMICA, S.L.

TIMER SETTING (A DIAGRAM)

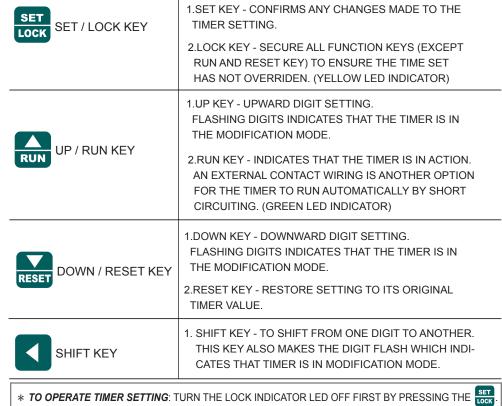

ONCE THE LOCK INDICATOR IS OFF, PRESS TO MAKE DIGITS FLASHING. THIS PREPARES TO SET THE DESIRED TIME. USE RUN OR RESET KEY TO ADJUST DIGITS. AFTER SETTING, PRESS LOCK TO ACCEPT SETTINGS MADE. PRESS SET AGAIN TO LOCK AND SECURE SETTINGS AND DISPLAY. WITH LOCK LED INDICATOR ON, THE TIMER IS NOW READY FOR OPERATION

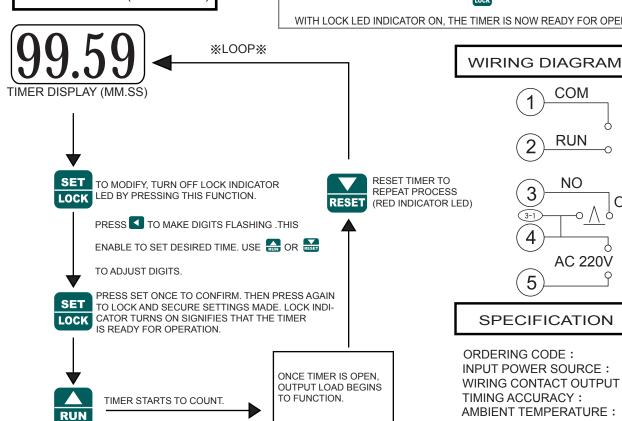

www.coreterm.es

WIRING CONTACT OUTPUT: Relay 250V/5A

TIMER COUNT MODE:

**SETTING MODE:** 

T482 (48mm×48mm) 220V AC 50/60HZ +0.01%

-10~55°C, 90% RH MM.SS

COUNTDOWN

OUT